

POLDIMAR

BVBA

CAIRO 180*200 OTTOMAN BED

IMPORTANT INFORMATION!



WE ADVISE YOU THAT BEFORE STARTING THE ASSEMBLY OF THIS PRODUCT PLEASE FAMILIARISE YOURSELF WITH THE IMPORTANT INSTRUCTIONS LISTED BELOW.

DO NOT'S

DO NOT OVER TIGHTEN ANY PART OF THIS ASSEMBLY.
DO NOT USE WASHING POWDER OR OTHER SUBSTANCES CONTAINING ABRASIVES WHEN CLEANING THE FURNITURE.
AS THESE MAY SCRATCH THE FURNITURE.
DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.
DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT, ITS USE COULD MAKE THIS PRODUCT UNSAFE.
DO NOT DRAG FULLY ASSEMBLED FURNITURE. WE RECOMMEND 2 PEOPLE
TO LIFT FURNITURE CLEAR OF THE FLOOR TO MOVE.

DO'S

DO USE A DAMP CLOTH (NOT WET) DRY DUSTER FOR CLEANING THE FURNITURE
DO TIGHTEN UP THE HARDWARES FROM TIME TO TIME DEPENDING ON THE USE OF PRODUCT. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE.

A	BOLT	 M8 x 15mm X 16	1	HEADBOARD	 X 1
B	BOLT	 M6 x 70mm X 8	2	FOOTBOARD	 X 1
C	BOLT	 M8 x 25mm X 42	3	SIDR RAIL	 X 2
D	NUT	 M8 x 18mm X 30	4	STRAP	 X 1
E	BOLT	 M8 x 35mm X 4	5	SUPPORT RAIL	 X 2
F	ALLEN KEY	 4 x 4 X 1	6	SUPPORT LEG	 X 4
G	ALLEN KEY	 5 x 5 X 2	7	SLATS	 X 42
H	FLANG NUT	 X 2	8	SUPPORT BAR	 X 4
I	SPANNER	 X 1	9	METAL FRAME	 X 2
J	HOOK	 X 2	10	METAL FRAME	 X 1
K	METAL FRAME CONNECTOR	 X 4	11	METAL FRAME	 X 1
L	CAP	 SINGLE X 28	12	NON WOVEN FABRIC	 X 1
M	CAP	 DOUBLE X 28	13	CENTER SUPPORT BAR	 X 1
N	LINK	 X 6			

KINDLY FOLLOW ASSEMBLY INSTRUCTION STEP BY STEP

1

B	BOLT	1	HEADBOARD	X 1
F	ALLEN KEY	X 1	FOOTBOARD	X 1
			SUPPORT BLOCK	X 4

2


A	BOLT	1	HEADBOARD	X 1
C	BOLT	2	FOOTBOARD	X 1
G	ALLEN KEY	1	SIDR RAIL	X 2
N	LINK	X 2		

3

E	BOLT	4		
13	ALLEN KEY	X 1	CENTER SUPPORT BAR	X 1



KINDLY FOLLOW ASSEMBLY INSTRUCTION STEP BY STEP

4

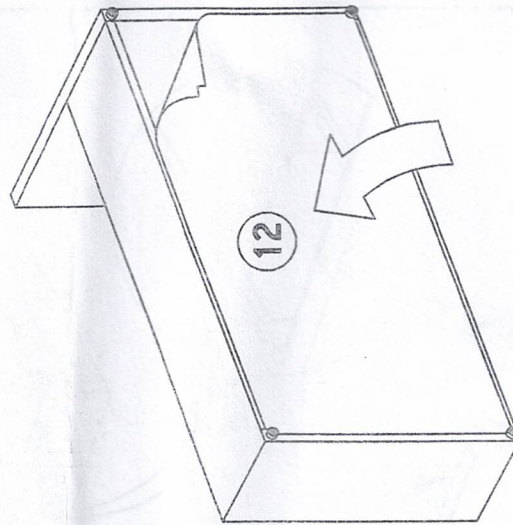


12. NON WOVEN FABRIC X 1

5

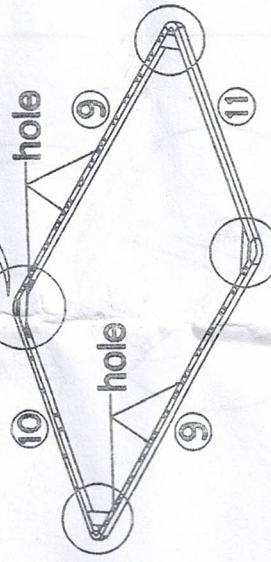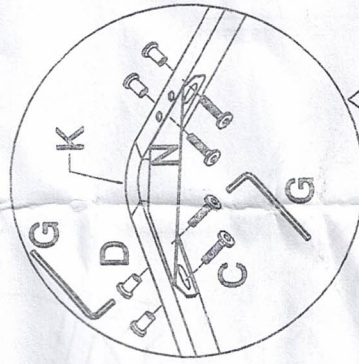

C	BOLT	M8 x 25mm X 16	9	METAL FRAME	X 2
D	NUT	M8 x 18mm X 16	10	METAL FRAME	X 1
G	ALLEN KEY	5 x 5 X 2	11	METAL FRAME	X 1
K	METAL FRAME CONNECTOR	X 4			
N	LINK	X 4			


6

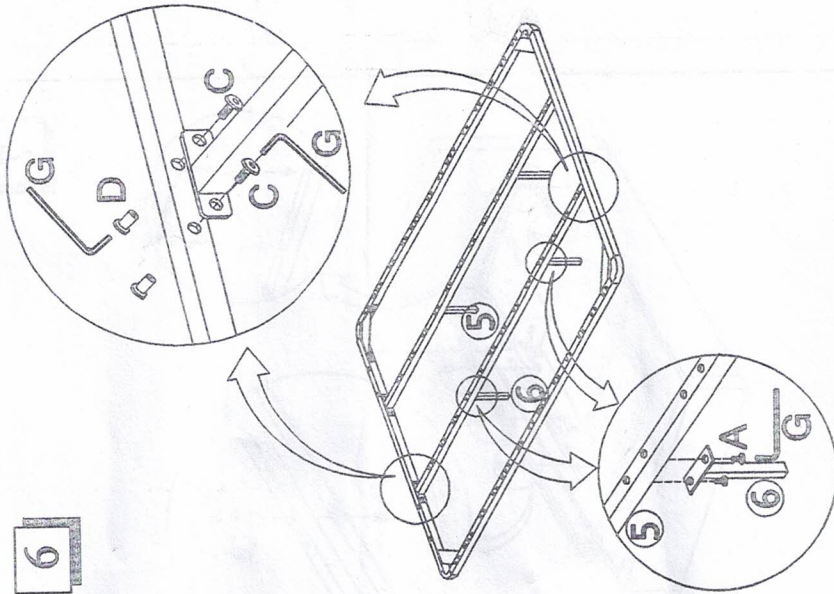

C	BOLT	M8 x 25mm X 8	5	SUPPORT RAIL	X 2
D	NUT	M8 x 18mm X 8	6	SUPPORT LEG	X 4
A	BOLT	M8 x 15mm X 8			
G	ALLEN KEY	5 x 5 X 2			


KINDLY FOLLOW ASSEMBLY INSTRUCTION STEP BY STEP

7

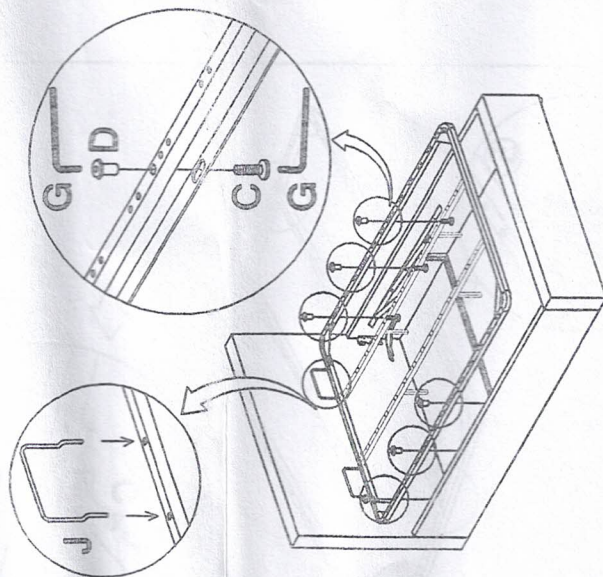


C	BOLT	Ø10mm M8 x 25mm X 6			
D	NUT	M8 x 18mm X 6			
G	ALLEN KEY	5 x 5 X 2			
J	HOOK		X 2		

8

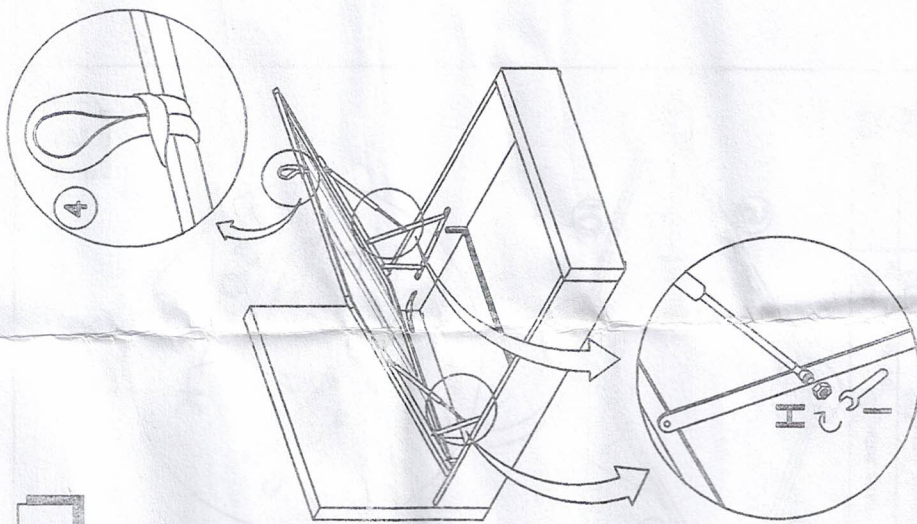

H	FLANG NUT		X 2		
I	SPANNER			X 1	
F	STRAP				X 1

9

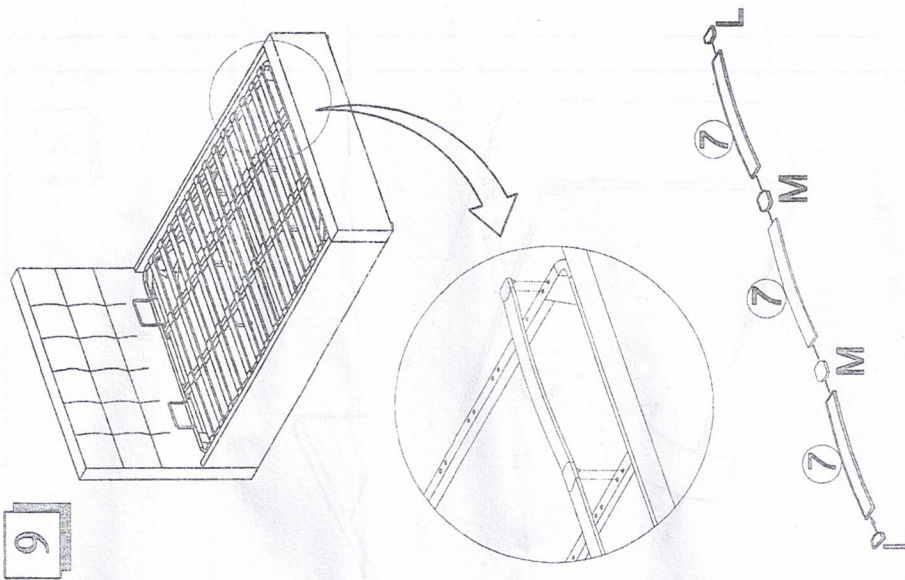

L	CAP				
M	CAP				
	SLAT				X 42