

POLDIMAR

BVBA

QINA BED 160*200 OTTOMAN BED

IMPORTANT INFORMATION!

WE ADVISE YOU THAT BEFORE STARTING THE ASSEMBLY OF THIS PRODUCT PLEASE FAMILIARISE YOURSELF WITH THE IMPORTANT INSTRUCTIONS LISTED BELOW.

DO NOT'S







DO NOT OVER TIGHTEN ANY PART OF THIS ASSEMBLY.
DO NOT USE WASHING POWDER OR OTHER SUBSTANCES CONTAINING ABRASIVES WHEN CLEANING THE FURNITURE.
AS THESE MAY SCRATCH THE FURNITURE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.
DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT, ITS USE COULD MAKE THIS PRODUCT UNSAFE.
DO NOT DRAG FULLY ASSEMBLED FURNITURE. WE RECOMMEND 2 PEOPLE

TO LIFT FURNITURE CLEAR OF THE FLOOR TO MOVE.


DO'S

DO USE A DAMP CLOTH(NOT WET) DRY DUSTER FOR CLEANING THE FURNITURE
DO TIGHTEN UP THE HARDWARES FROM TIME TO TIME DEPENDING ON THE USE OF PRODUCT. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE.

A	BOLT		M8 x 15mm X 12	1	HEADBOARD		X 1
B	BOLT		M6 x 70mm X 8	2	FOOTBOARD		X 1
C	BOLT		M8 x 25mm X 32	3	SIDR RAIL		X 2
D	NUT		M8 x 18mm X 20	4	STRAP		X 1
E	BOLT		M8 x 35mm X 4	5	SUPPORT RAIL		X 1
F	ALLEN KEY		4 x 4 X 2	6	SUPPORT LEG		X 2
G	ALLEN KEY		5 x 5 X 2	7	SLATS		X 28
H	FLANG NUT		X 2	8	SUPPORT BAR		X 4
I	SPANNER		X 1	9	METAL FRAME		X 2
J	HOOK		X 2	10	METAL FRAME		X 1
K	METAL FRAME CONNECTOR		X 4	11	METAL FRAME		X 1
L	CAP		SINGLE X 28	12	NON WOVEN FABRIC		X 1
M	CAP		DOUBLE X 14	13	CENTER SUPPORT BAR		X 1
N	LINK		X 6				
O	BOLT		M6 x 25mm X 6				
P	NUT		M6 x 18mm X 6				


KINDLY FOLLOW ASSEMBLY INSTRUCTION STEP BY STEP

1

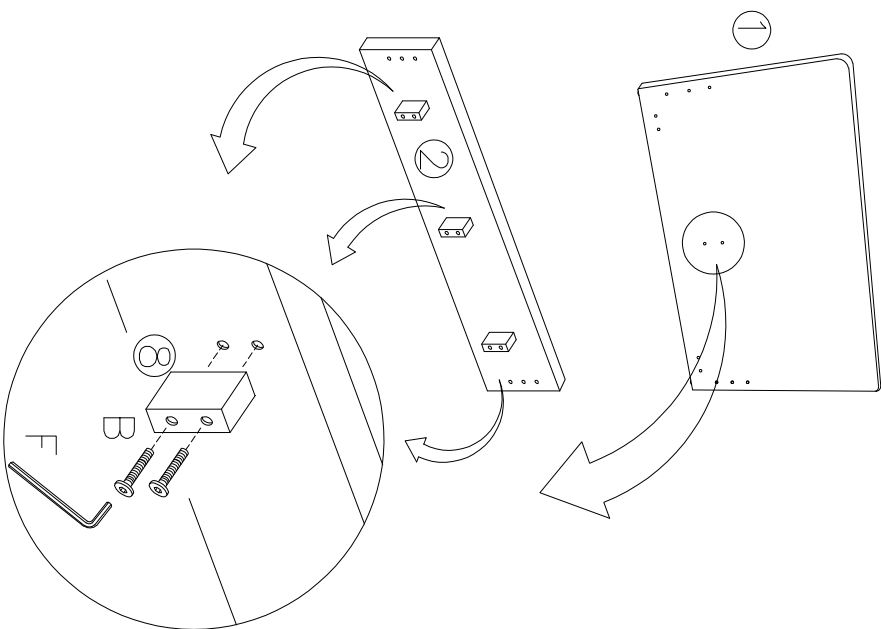


B	BOLT	 M6 x 70mm X 8	1	HEADBOARD	 X 1
F	ALLEN KEY	 4 x 4 X 1	2	FOOTBOARD	 X 1
			8	SUPPORT BLOCK	 X 4

2

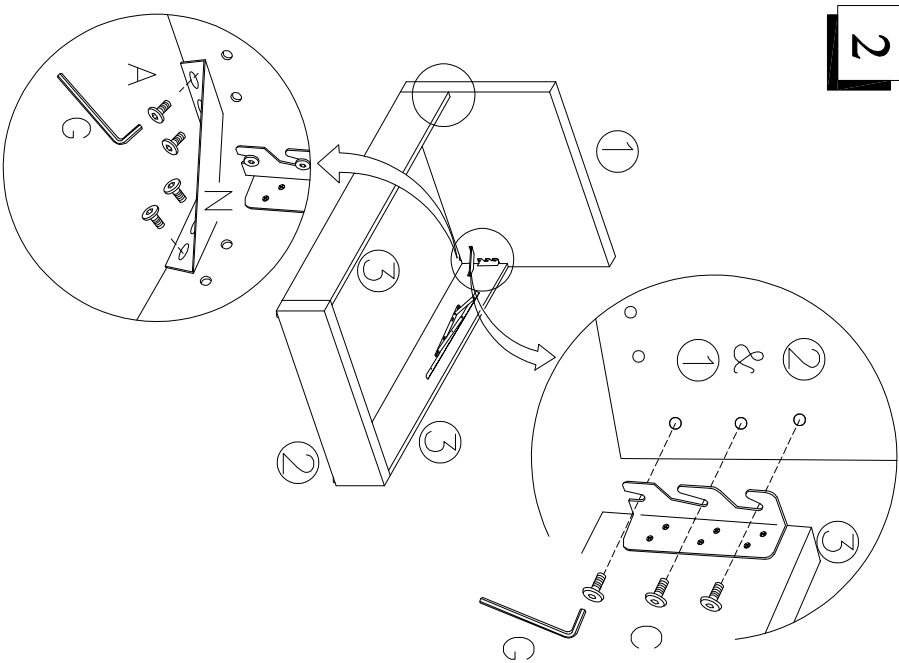

A	BOLT	 M8 x 15mm X 8	1	HEADBOARD	 X 1
C	BOLT	 M8 x 25mm X 12	2	FOOTBOARD	 X 1
G	ALLEN KEY	 5 x5x 65mm X 1	3	SIDR RAIL	 X 2
N	LINK	 X 2			


3

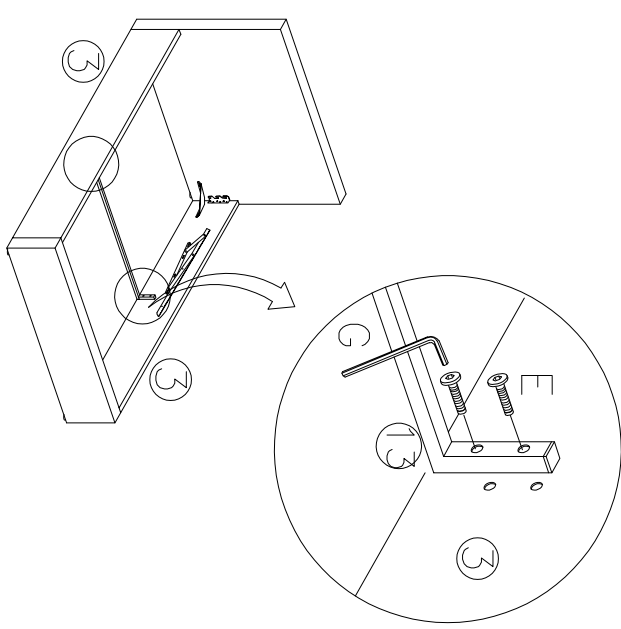

E	BOLT	 M6 x 35mm X 4	13	CENTER SUPPORT BAR	 X 1
G	ALLEN KEY	 5 x 5 X 1			



KINDLY FOLLOW ASSEMBLY INSTRUCTION STEP BY STEP


4

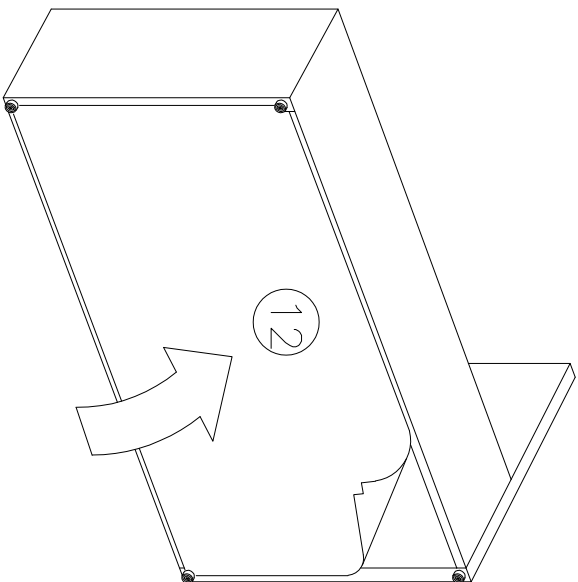



12	NON WOVEN FABRIC		X 1	
----	------------------	--	-----	--

5

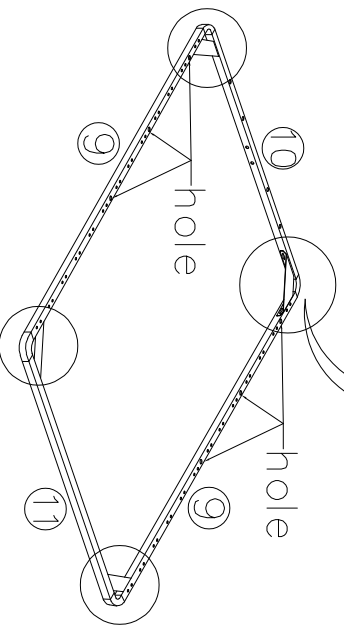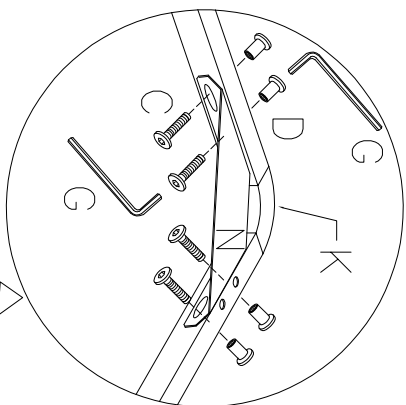

C	BOLT		M8 x 25mm X 16	9	METAL FRAME		LONG ⑨	X 2
D	NUT		M8 x 18mm X 16	10	METAL FRAME		Feetboard end	X 1
G	ALLEN KEY		5 x 5	11	METAL FRAME		Feetboard end	X 1
K	METAL FRAME CONNECTOR		X 4					
N	LINK		X 4					


6

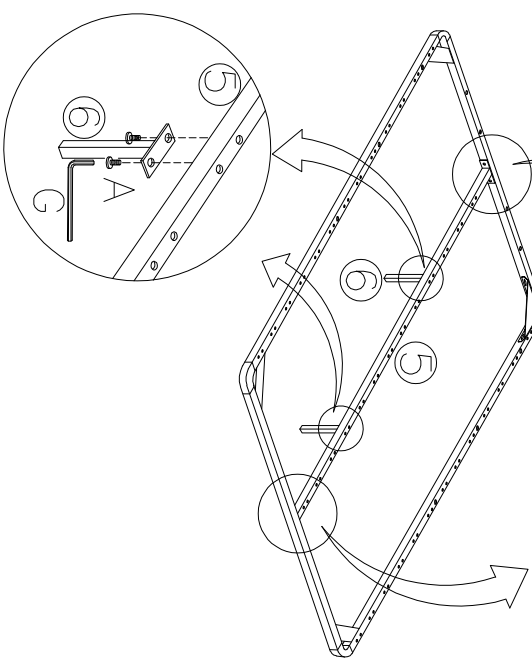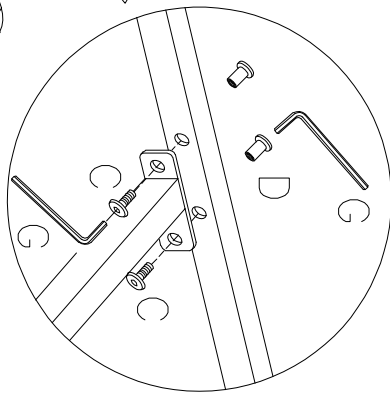

C	BOLT		M8 x 25mm X 4	5	SUPPORT RAIL		X 1
D	NUT		M8 x 18mm X 4	6	SUPPORT LEG		X 2
A	BOLT		M8 x 15mm X 4				
G	ALLEN KEY		5 x 5	X 2			


KINDLY FOLLOW ASSEMBLY INSTRUCTION STEP BY STEP

7

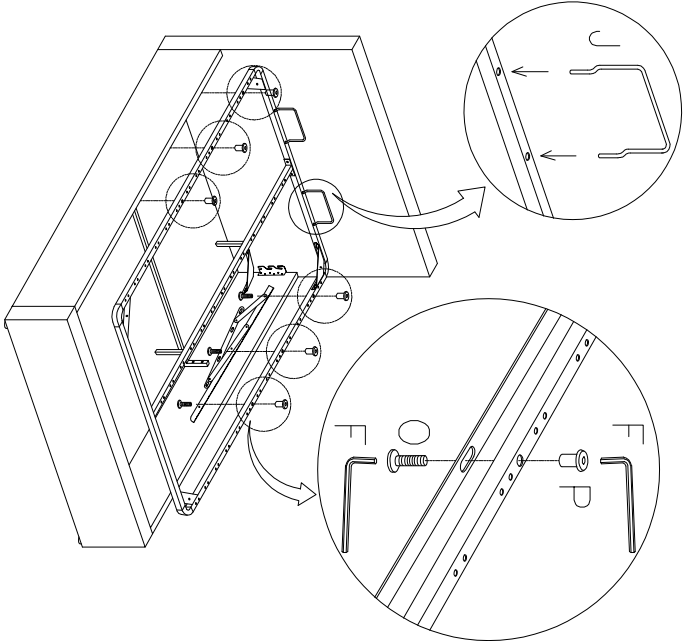


O	BOLT		M6 x 25mm X 6		
P	NUT		M6 x 18mm X 6		
F	ALLEN KEY		4 x 4 X 2		
J	HOOK		X 2		

8

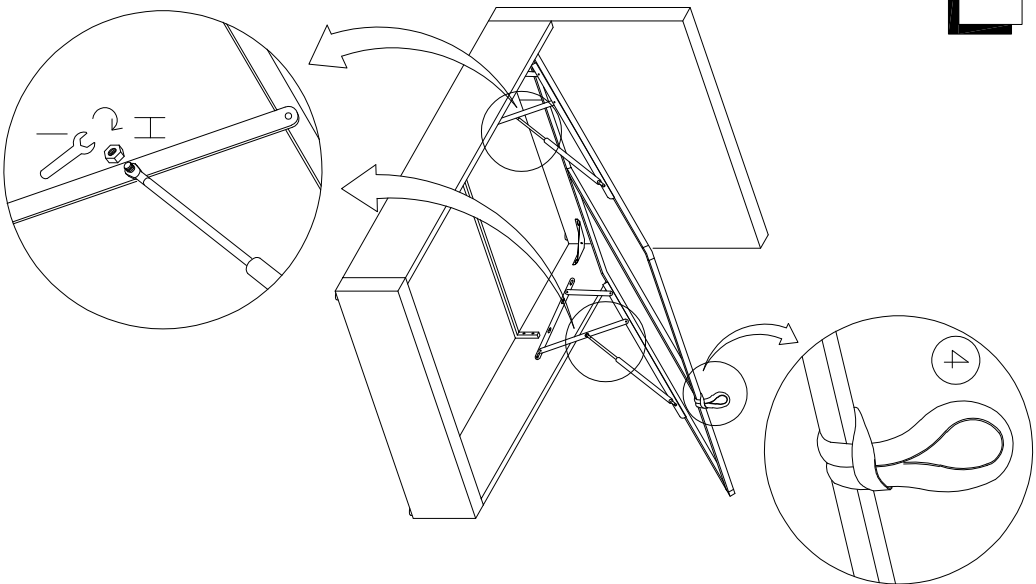

H	FLANG NUT		X 2	4	STRAP		X 1
L	SPANNER		X 1				

9

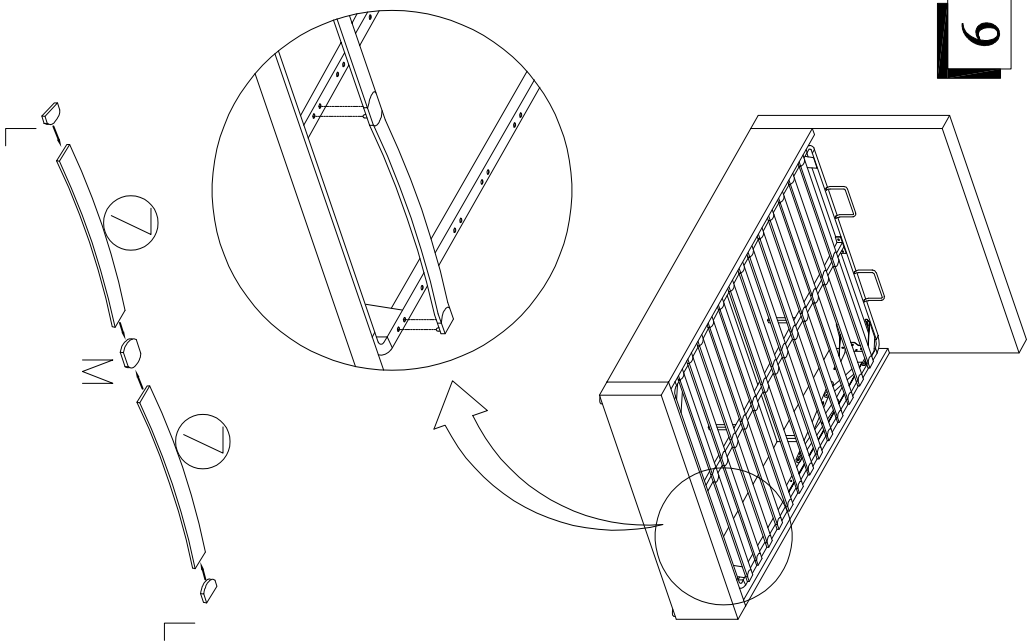

L	CAP		SINGLE X 28	7	SLATS		X 28
M	CAP		DOUBLE X 14				