

POLDIMAR

BVBA

# MINYA BED 90\*200 OTTOMAN BED

## IMPORTANT INFORMATION!

WE ADVISE YOU THAT BEFORE STARTING THE ASSEMBLY OF THIS PRODUCT PLEASE FAMILIARISE YOURSELF WITH THE IMPORTANT INSTRUCTIONS LISTED BELOW.

DO NOTS

DO NOT OVER TIGHTEN ANY PART OF THIS ASSEMBLY.  
DO NOT USE WASHING POWDER OR OTHER SUBSTANCES CONTAINING ABRASIVES WHEN CLEANING THE FURNITURE.  
AS THESE MAY SCRATCH THE FURNITURE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.  
DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT,ITS USE COULD MAKE THIS PRODUCT UNSAFE.





























DO NOT DRAG FULLY ASSEMBLED FURNITURE.WE RECOMMEND 2 PEOPLE

TO LIFT FURNITURE CLEAR OF THE FLOOR TO MOVE.

DO'S


DO USE A DAMP CLOTH(NOT WET)DRY DUSTER FOR CLEANING THE FURNITURE






DO TIGHTEN UP THE HARDWARES FROM TIME TO TIME DEPENDING ON THE USE OF PRODUCT.THIS IS COMPLETELY. NORMAL FOR ANY FLAT PACK FURNITURE.

<b>A</b>	BOLT	 M8 x 15mm	X 12	<b>1</b>	HEADBOARD	 X 1
<b>B</b>	BOLT	 M6 x 70mm	X 6	<b>2</b>	FOOTBOARD	 X 1
<b>C</b>	BOLT	 M8 x 25mm	X 32	<b>3</b>	SIDR RAIL	 X 2
<b>D</b>	NUT	 M8 x 18mm	X 20	<b>4</b>	STRAP	 X 1
<b>E</b>	BOLT	 M8 x 35mm	X 4	<b>5</b>	SUPPORT RAIL	 X 1
<b>F</b>	ALLEN KEY	 4 x4	X 2	<b>6</b>	SUPPORT LEG	 X 2
<b>G</b>	ALLEN KEY	 5 x5	X 2	<b>7</b>	SLATS	 X 14
<b>H</b>	FLANG NUT	 X 2	X 2	<b>8</b>	SUPPORT BAR	 X 3
<b>I</b>	SPANNER	 X 1	X 1	<b>9</b>	METAL FRAME	 X 2
<b>J</b>	HOOK	 X 2	X 2	<b>10</b>	METAL FRAME	 X 1
<b>K</b>	METAL FRAME CONNECTOR	 X 4	X 4	<b>11</b>	METAL FRAME	 X 1
<b>L</b>	CAP	 SINGLE	X 28	<b>12</b>	NON WOVEN FABRIC	 X 1
<b>M</b>	LINK	 X 6	X 6	<b>13</b>	CENTER SUPPORT BAR	 X 1
<b>N</b>	BOLT	 M6 x 25mm	X 6			
<b>O</b>	NUT	 M6 x 18mm	X 6			

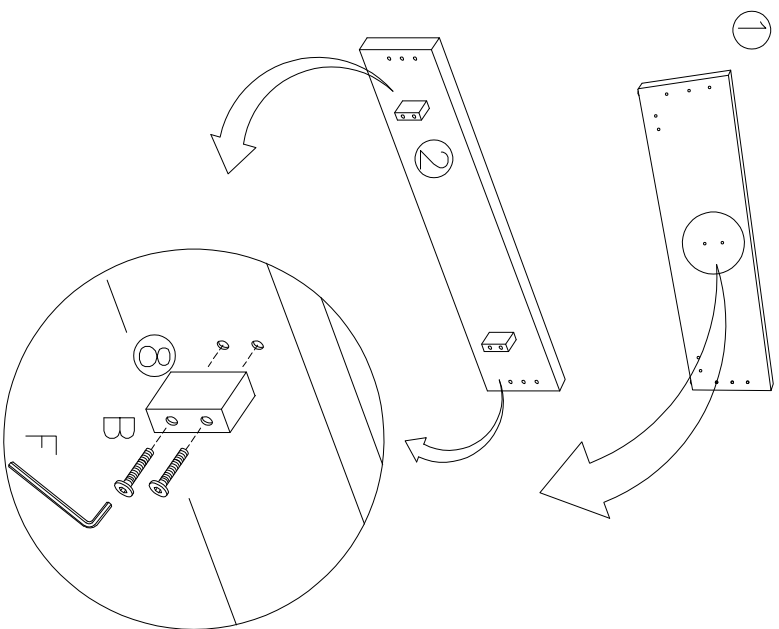
KINDLY FOLLOW ASSEMBLY INSTRUCTION STEP BY STEP








1

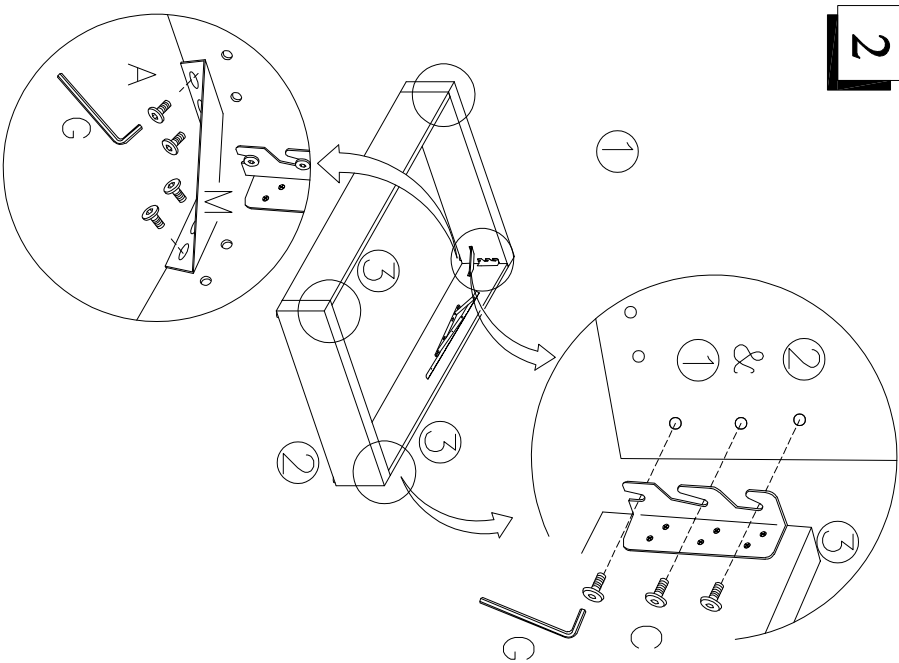


<b>B</b>	BOLT		M6 x 70mm X 6	<b>1</b>	HEADBOARD		X 1
<b>F</b>	ALLEN KEY		4 x 4 X 1	<b>2</b>	FOOTBOARD		X 1
				<b>8</b>	SUPPORT BLOCK		X 3




2



<b>A</b>	BOLT		M8 x 15mm X 8	<b>1</b>	HEADBOARD		X 1
<b>C</b>	BOLT		M8 x 25mm X 12	<b>2</b>	FOOTBOARD		X 1
<b>G</b>	ALLEN KEY		5 x5x 65mm X 1	<b>3</b>	SIDR RAIL		X 2
<b>M</b>	LINK		X 2				

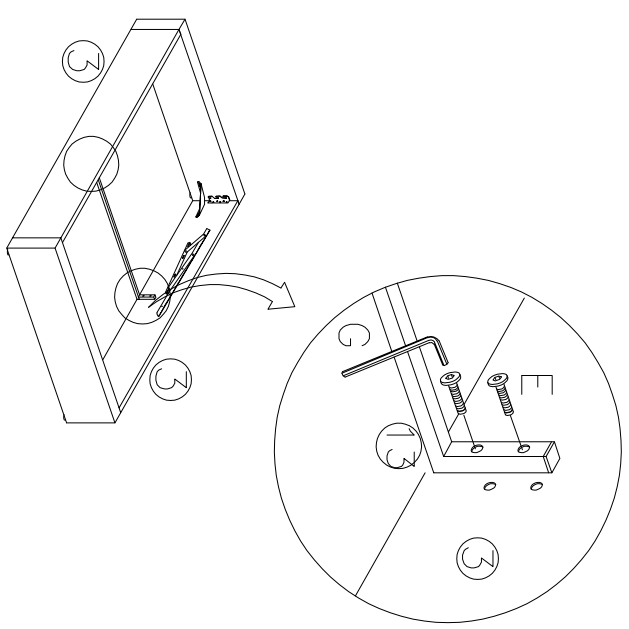
3



<b>E</b>	BOLT		M6 x 35mm X 4	<b>13</b>	CENTER SUPPORT BAR		X 1
<b>G</b>	ALLEN KEY		5 x 5 X 1				



KINDLY FOLLOW ASSEMBLY INSTRUCTION STEP BY STEP

4

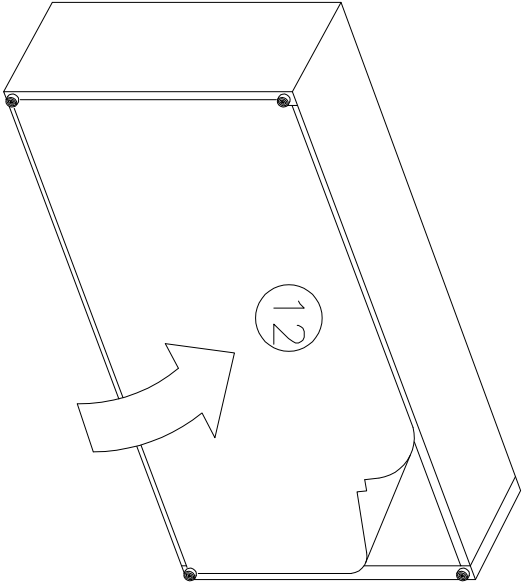



<b>12</b>	NON WOVEN FABRIC		X 1
-----------	------------------	--	-----

5

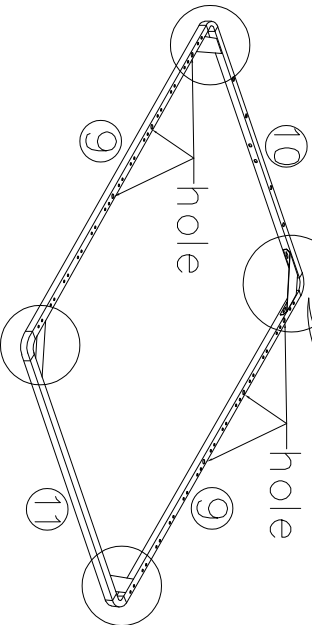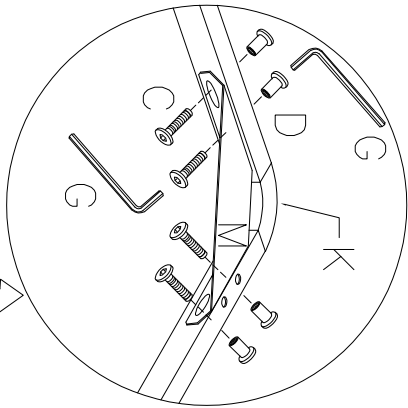

<b>C</b>	BOLT		M8 x 25mm X 16	<b>9</b>	METAL FRAME		long	X 2
<b>D</b>	NUT		M8 x 18mm X 16	<b>10</b>	METAL FRAME		footboard end	X 1
<b>G</b>	ALLEN KEY		5 x 5	<b>11</b>	METAL FRAME		footboard end	X 1
<b>K</b>	METAL FRAME CONNECTOR		X 4					
<b>M</b>	LINK		X 4					


6

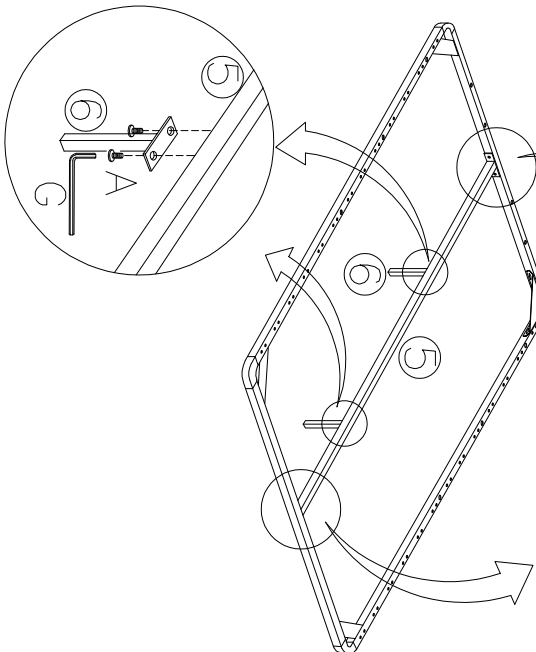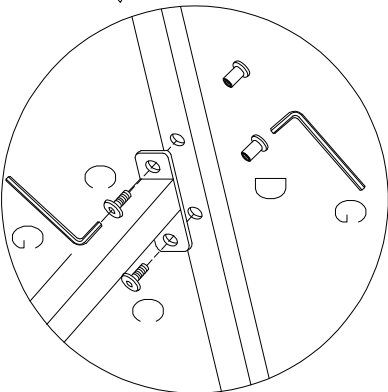





<b>C</b>	BOLT		M8 x 25mm X 4	<b>5</b>	SUPPORT RAIL		X 1
<b>D</b>	NUT		M8 x 18mm X 4	<b>6</b>	SUPPORT LEG		X 2
<b>A</b>	BOLT		M8 x 15mm X 4				
<b>G</b>	ALLEN KEY		5 x 5	X 2			

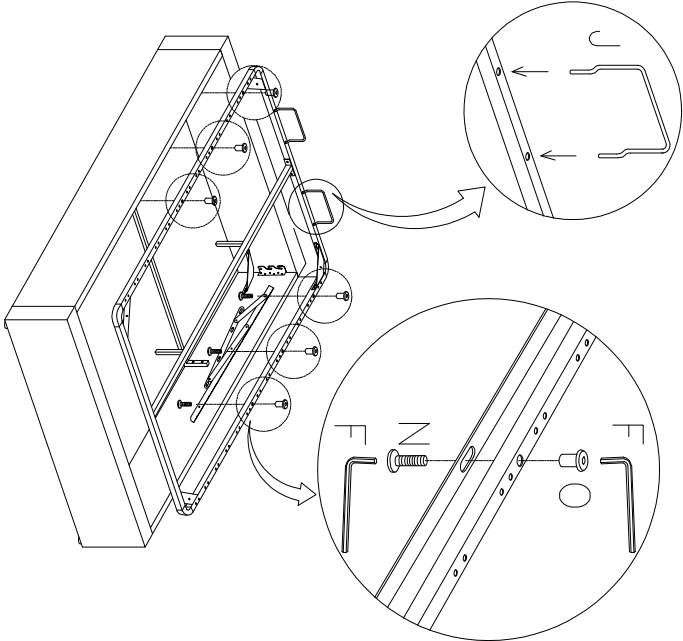
KINDLY FOLLOW ASSEMBLY INSTRUCTION STEP BY STEP




7




N	BOLT		M6 x 25mm X 6		
O	NUT		M6 x 18mm X 6		
F	ALLEN KEY		4 x 4 X 2		
J	HOOK		X 2		

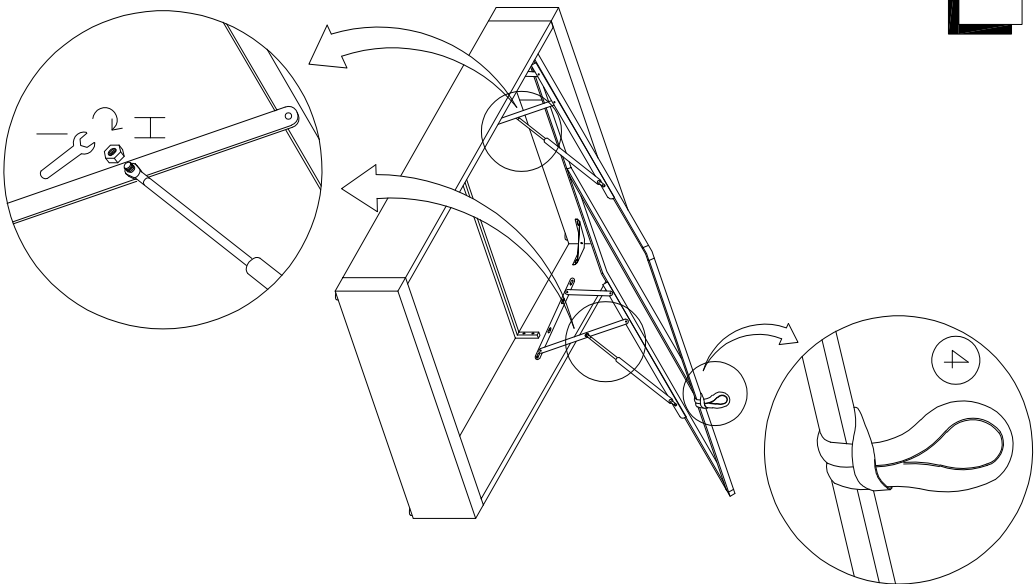

8



H	FLANG NUT		X 2	4	STRAP		X 1
L	SPANNER		X 1				

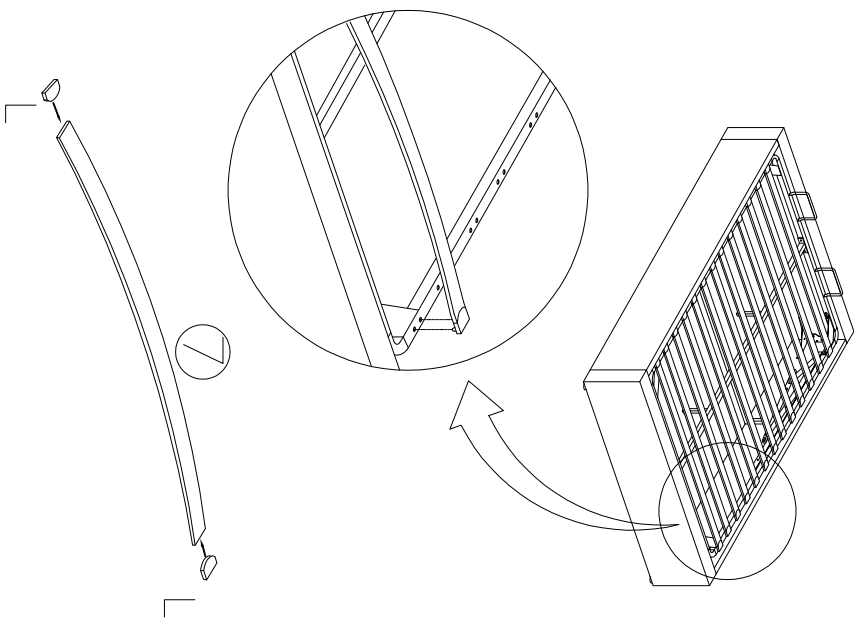9



L	CAP		SINGLE X 28	7	SLATS		X 14
---	-----	---	-------------	---	-------	---	------