
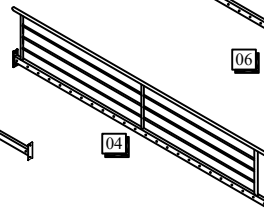
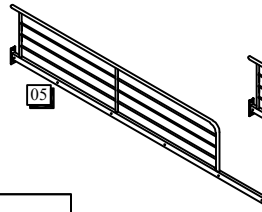
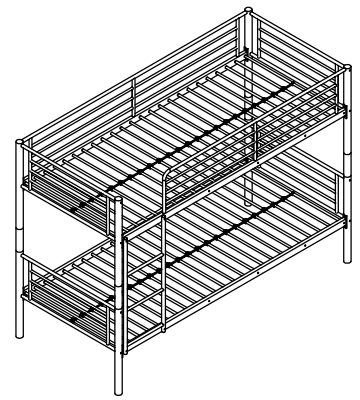

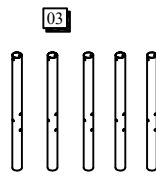



Assembly sheet

PART CHECK LIST











KA-903W

NO	PARTICULARS	QTY
01	headboard	4
02	column with hole	3
03	column without hole	5
04	back guardrail	1
05	front guardrail	1
06	side rail	2
07	ladder	1
08	slats without nut	36
09	slats with nut	12
10	connection tube	4

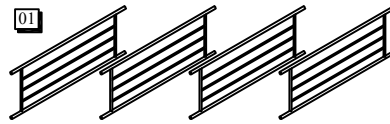

A M6 x 12MM 20 PCS	B M6 x 20MM 16 PCS	C M6 x 60MM 8 PCS	D M6 x 35MM 4 PCS
E hook 46 PCS	F caps 025 4 PCS	G caps 048.5 4 PCS	H caps 048.5 4 PCS
			I 4 x 4MM 1 PCS

C M6 x 60MM 8 PCS

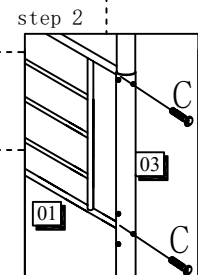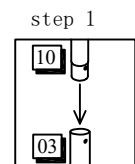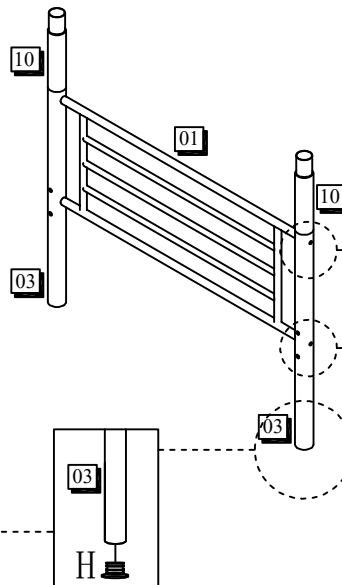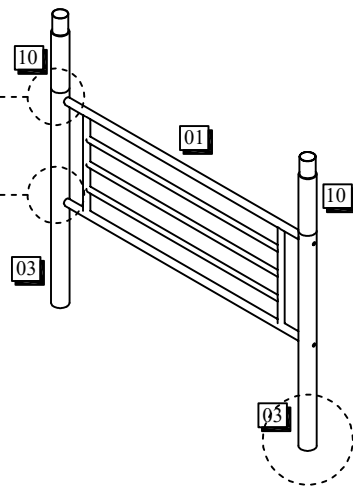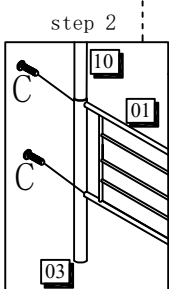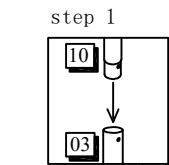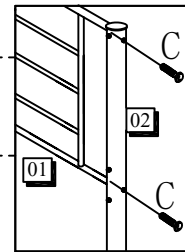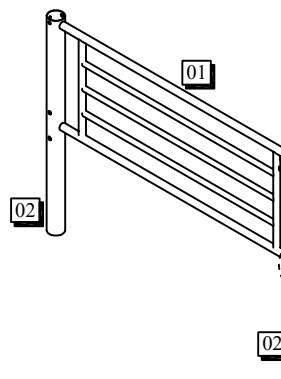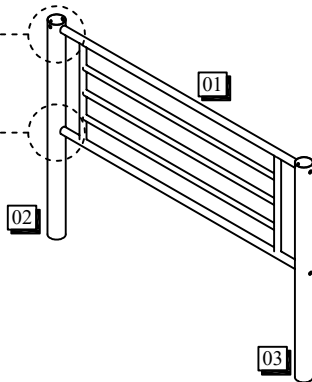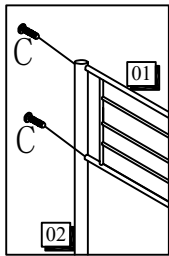



C M6 x 60MM 8 PCS
H caps 048.5 4 PCS

Assembly sheet

KA-903w

Notice: When install the slats, there are 6pcs tubes with nuts and 18pcs tubes without nuts.

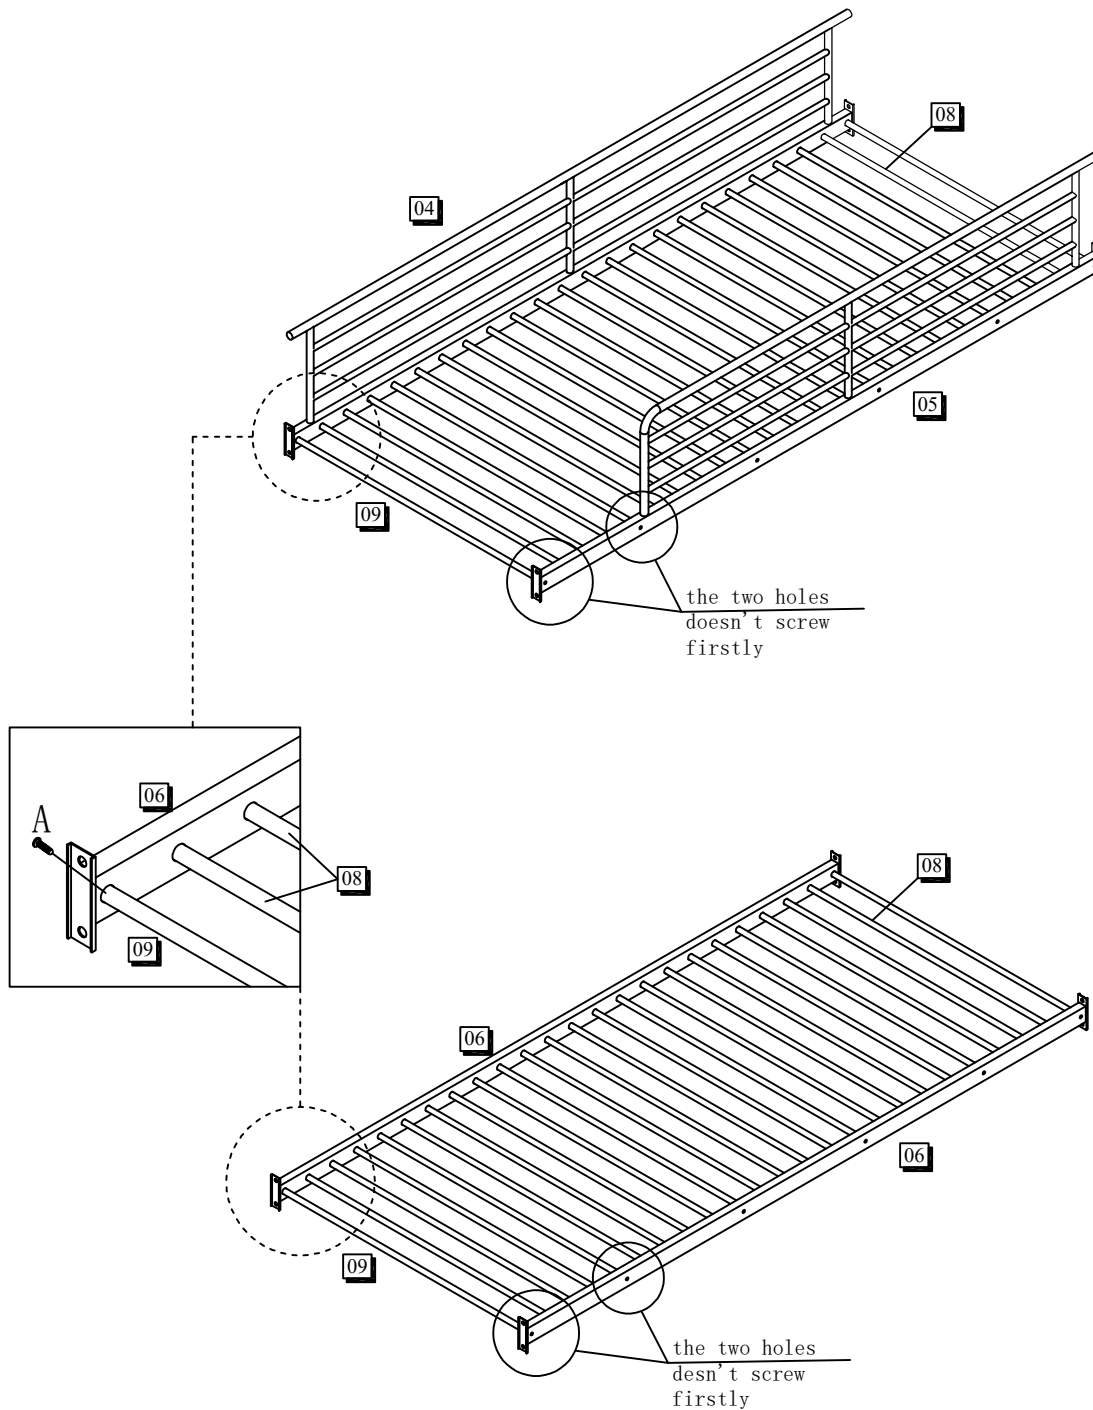

First, install 6pcs tubes with nuts into the side rail (with small holes in the side rail) and lock one side with screw A. Then put the other 18pcs in, and then take another bed side rail to put slats in one by one, and then lock it with nut A. The two layers are installed the same, and the two screws at the front guardrail opening don't install first. (which is for the ladder)




Assembly sheet

KW-903W

fix the bed base to the headboard. and connecting the upper bed to the bottom.



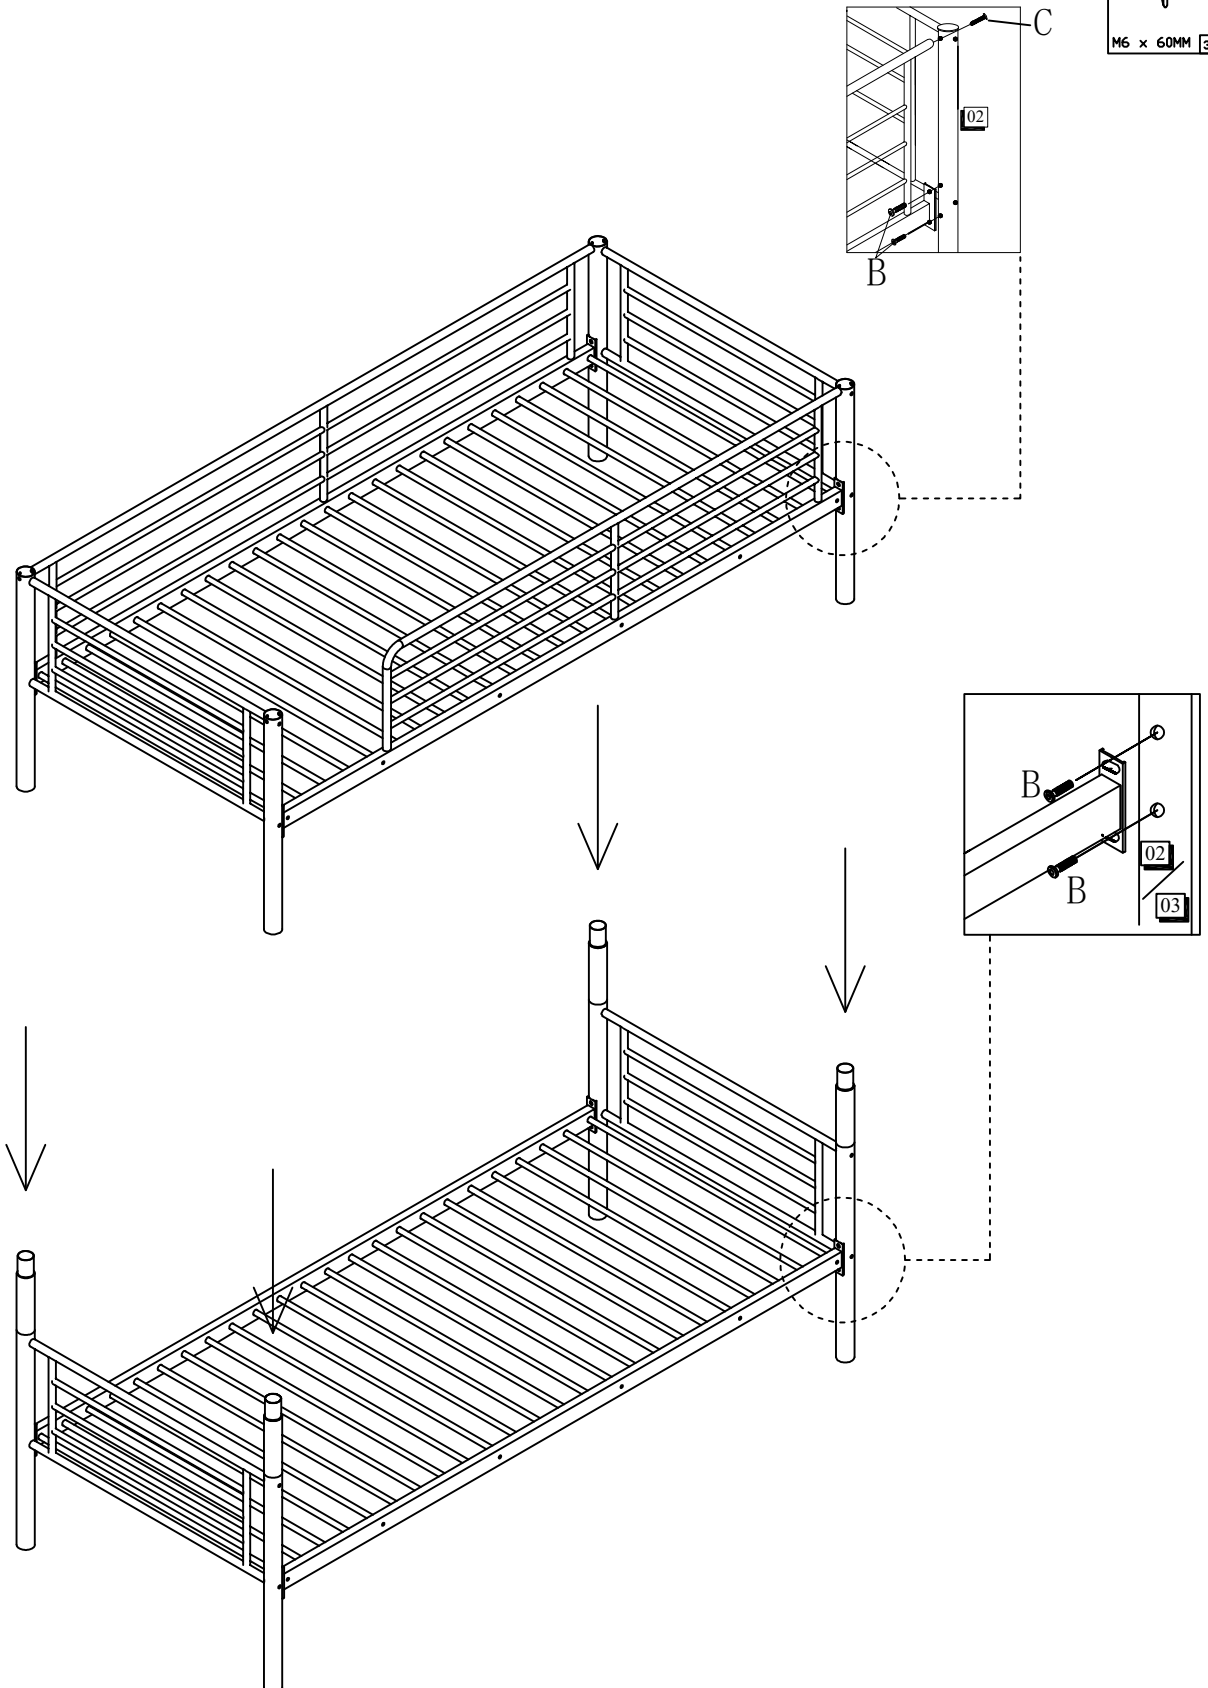

B	
M6 x 20MM	16 PCS
C	
M6 x 60MM	3 PCS



Assembly sheet

KA-903W

fixing the ladder to the bed with screw D and insert the caps F. then
fix the hooks to the slats and insert the cap G to the column

D	
M6 x 35MM	4 PCS
E	
hooks	46 PCS
F	
caps Ø25	4 PCS
G	
caps Ø48.5	4 PCS

